


CHANGES: AD Coords - Traffic Circuit - OBST - Topography. © JEPPESEN, 2008, 2009. ALL RIGHTS RESERVED.

**GMUNDEN**  
GMUNDEN-LAAKIRCHEN  
AUSTRIA

19-2 07 AUG 09  
JEPPESEN

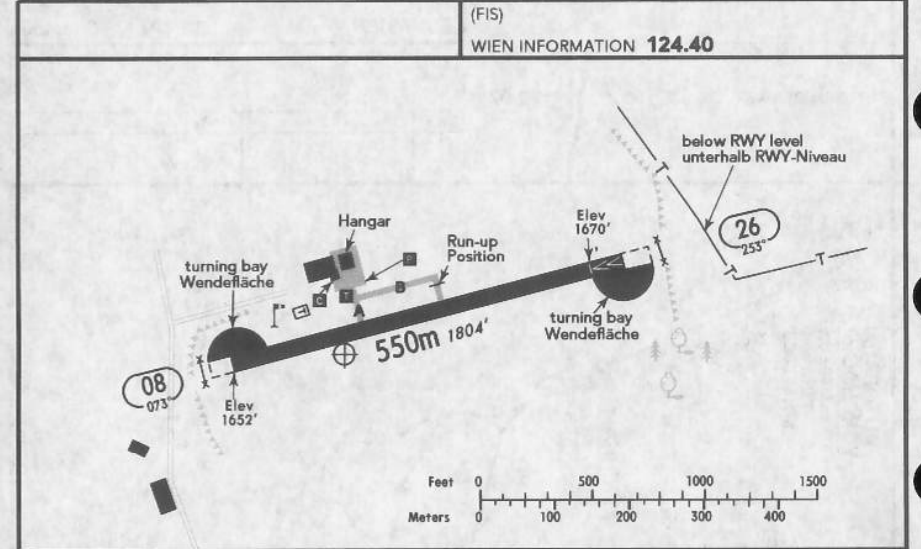

Taxiway  
 Obstacle  
 Taxi (O/R)  
 Other

RWY No	Dimension (m) - Surface	TORA (m)	LDA (m)	Strength	Lights
08	550 x 18 Asphalt	600	550	2t SIWL	—
26	550 x 18 Asphalt	600	500		

**Inclusive/einschließlich CWY.**

Contact GMUNDEN AERODROME well prior to reaching the reporting points.  
 Look out for gliders.  
 In front of both THR's marked steep slopes.  
 High-tension line in front THR 26 below RWY level.  
 Avoid residential areas near AD, especially Gschwandt, Oberndorf, Kirchham and Oberweis. After departure RWY 08 turn left before Farmhouse. When landing on RWY 26 avoid overflying Farmhouse.

GMUNDEN FLUGPLATZ frühzeitig vor Erreichen der Meldepunkte rufen.  
 Auf Segelflüge achten.  
 Vor beiden Schwellen markierte Steil-Böschungen.  
 Hochspannungsleitung vor Schwelle 26 unterhalb Landebahn-Niveau.  
 Wohngebiete in Platznähe meiden, insbesondere Gschwandt, Oberndorf, Kirchham und Oberweis. Nach dem Start von RWY 08 vor dem Bauernhaus links wegdrehen. Bei der Landung auf die RWY 26 das Bauernhaus nicht überfliegen.

CHANGES: Text. © JEPPESEN, 2008, 2009. ALL RIGHTS RESERVED.